

UWMC- ZO4 INSTALLATION MANUAL



1.Installation Instructions

1.1 Safety Precautions


- Installation must be performed by professional electricians
- Turn off main power supply before installation
- Verify power is off using appropriate testing equipment
- Product must be kept away from fire and water
- Not suitable for moisture-prone areas (e.g., bathrooms)
- Follow all local electrical codes and regulations
- Verify relay load ratings before connection

1.2 Mounting Requirements

- Standard 86mm wall box compatibility
- Minimum 50mm mounting depth
- Dry, indoor location required
- Operating temperature: 0°C to 40°C
- Humidity range: 5-90% non-condensing



1.3 Installation Instructions

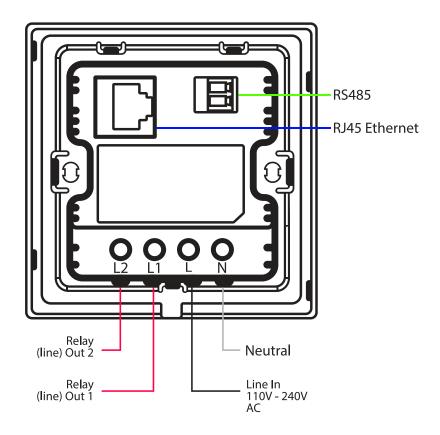

Pre-Installation Checks

- 1. Verify wall box compatibility (86mm standard)
- 2. Ensure minimum 50mm mounting depth
- 3. Confirm power supply meets requirements
- 4. Verify load requirements for relay channels
- 5. Check all necessary tools are available



Installation Steps

- 1. Turn off main power at circuit breaker
- 2. Test that power is off with voltage tester
- 3. Remove existing wall plate/device if present
- 4. Install wall box if not present (minimum 50mm depth)
- 5. Connect power and relay wiring according to diagram:
 - N: Neutral Wire Input
 - L: Line Wire Input (110 240V AC)
 - L1: Line Wire Output (Relay 1)
 - L2: Line Wire Output (Relay 2)
- 6. If you want to use relay outputs please connect neutrals of UWMC-Y04 and Load together.
- 7. Connect network cable (if using wired connection)
- 8. Mount the device base to wall box
- 9. Attach main unit to the base
- 10. Verify installation is level and secure

Important Installation Notes

- Do not overtighten mounting screws
- Ensure proper clearance around the device
- Verify all connections before restoring power
- If panel is not flush after installation, check wall box alignment

2. Interface Configuration

2.1 Initial Setup

- 1. Power on the device
- 2. Select language and time zone
- 3. Configure network settings
- 4. Connect to ULDC system
- 5. Verify system communication

CRIB Lighting UWMC-Z04 Installation Manual



2.2 ULDC Integration

- 1. Network Configuration
 - Configure device credentials
 - Test connection status
- 2. Device Discovery
 - Scan for available ULDCs
 - Add devices to interface
 - Verify device communication
- 3. Scene Configuration
 - Create lighting scenes
 - Set up schedules
 - Configure automation rules

3. Operation Guidelines

Complete the installation by following the UMWC-Y04 Setup Manual steps.

4. Troubleshooting Guide

4.1 Common Issues

- 1. Display Issues
 - Screen not turning on
 - Check power connection
 - Verify input voltage
 - Check for physical damage
 - Touch not responding
 - Clean screen surface
 - Restart device
 - Check for software updates



CRIB Lighting UWMC-Z04 Installation Manual



- 2. Network Connection Problems
 - Wi-Fi Connection
 - Verify network credentials
 - Check signal strength
 - Reset network settings
 - Ethernet Issues
 - Check cable connection
 - Verify network settings
 - Test network connectivity
- 3. ULDC Communication
 - Device Not Found
 - Check network connectivity
 - Confirm device ID
 - Control Not Working
 - Verify device status
 - Test connection stability

4.2 Maintenance

- 1. Regular Maintenance
 - Clean screen with soft cloth
 - Check connections periodically
 - Update firmware when available
 - Backup configuration data
- 2. Preventive Measures
 - Keep ventilation clear
 - Avoid direct sunlight
 - Protect from moisture
 - Monitor system logs